

SILENT ROUND (ONE & TWO)

RECESSED DOWNLIGHT

DARKON™
THE EDGE OF LIGHT

Ensure that products are mounted with supplied, recommended or appropriate screws and fixings to suit the mounting surface.



WARNING

INSTALLATION IS ONLY TO BE CARRIED OUT BY SUITABLY QUALIFIED PERSONS IN ACCORDANCE WITH INSTALLATION INSTRUCTIONS AND ALL APPLICABLE REGULATIONS OR STANDARDS. (IMPROPER INSTALLATION CAN CREATE AN ELECTRICAL HAZARD WITH RISK OF ELECTRIC SHOCK, FIRE OR INJURY). DARKON WILL NOT BE HELD RESPONSIBLE FOR ANY CONSEQUENCES ARISING FROM IMPROPER PRODUCT HANDLING, STORAGE OR INSTALLATION.

TOOLS REQUIRED

FOR INSTALL: POWER DRILL / PHILLIPS DRIVER / PENCIL / WALLBOARD SAW

FOR FINISH: PAINT BRUSH / SANDING BLOCK + APPROPRIATE SAND PAPER / TROWEL / PAINT.

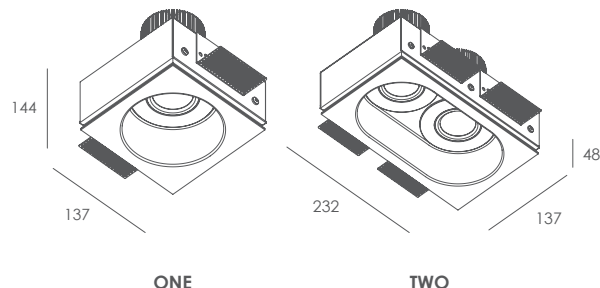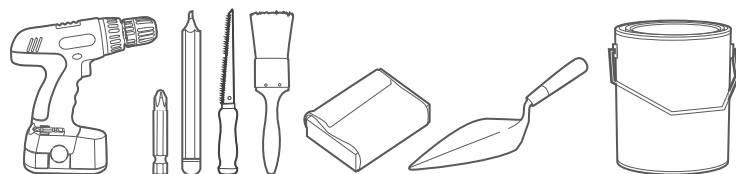

MAINTENANCE




Wipe product with a clean dry microfiber cloth. Do not use any cleaning products/ chemicals to clean product.


SERVICING

This is a non servicable fitting. Remote powersupply can be replaced if deemed faulty.


COMPONENTS

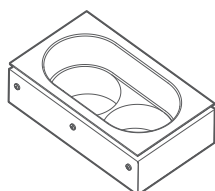


A

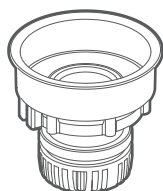

B

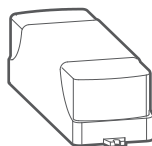

C

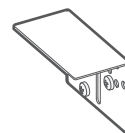

D




E


DISTANCE

DESCRIPTION


A)	50MM (MINIMUM)	CLEARANCE FOR TOP OF LUMINARE
B)	40MM	MOUNTING BRKT CLEARANCE
C)	138mm X 138mm	SILENT RND 1 CUTOUT
D)	233mm X 138mm	SILENT RND 2 CUTOUT
E)	25MM	MAX WALLBOARD THICKNESS

MINIMUM AREA REQUIREMENT FIGURE 1.

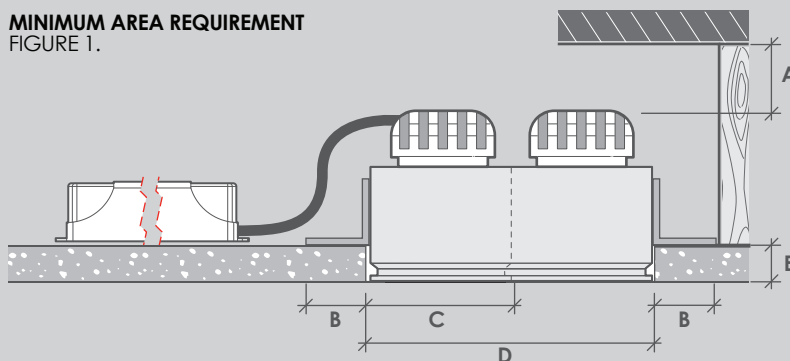


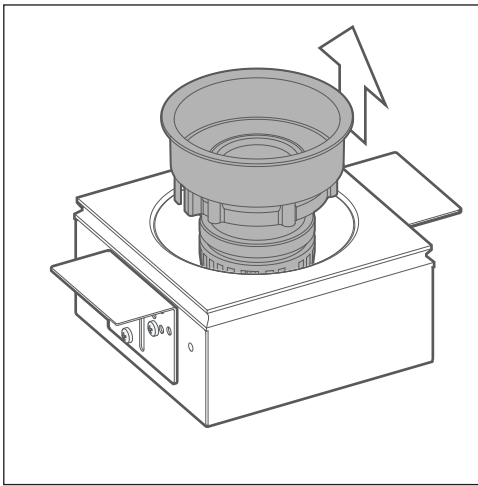


1.
Unassemble downlight engines(B) from
plasterbody(A)

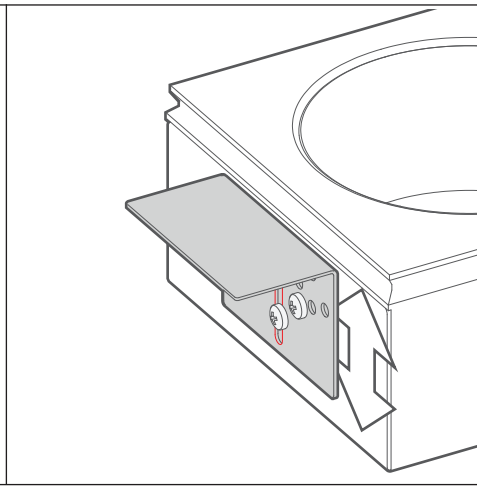


2.
Adjust Mounting bracket to suit thickness of
wallboard(see Figure 1)

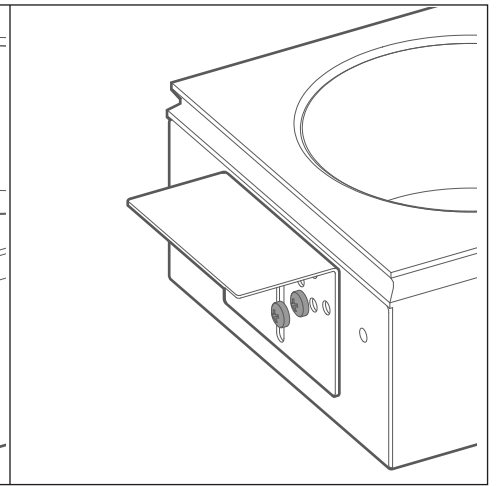


3.
Fix Mounting bracket.

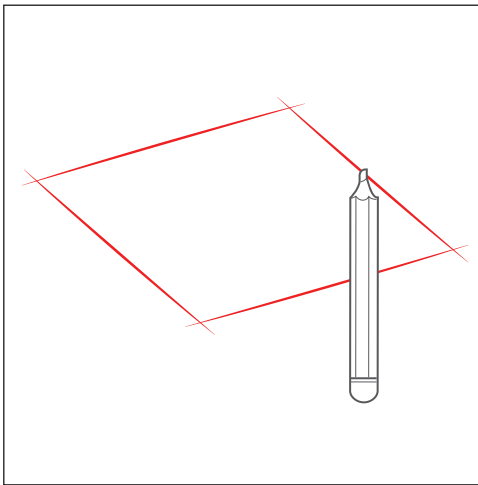


4.
Measure and mark desired location for
downlight.

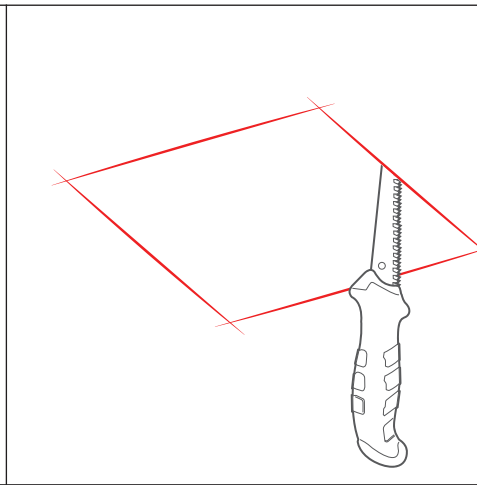


5.
With an appropriate wallboard saw,make
appropriate sized cutout.

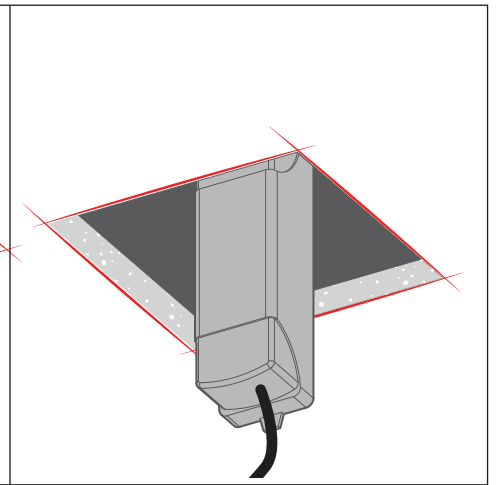


6.
Insert the driver into the cut out.

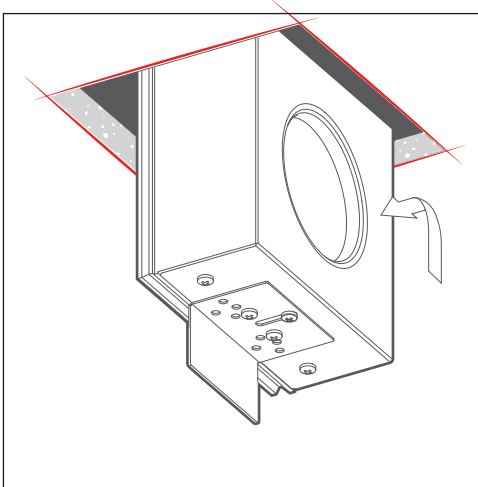


7.
Insert plasterbody(A) into cutout by
stepping in one side first.

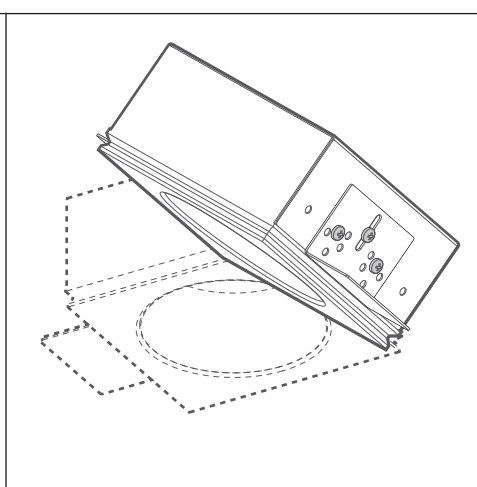


8.
Insert other side of the plasterbody(A).

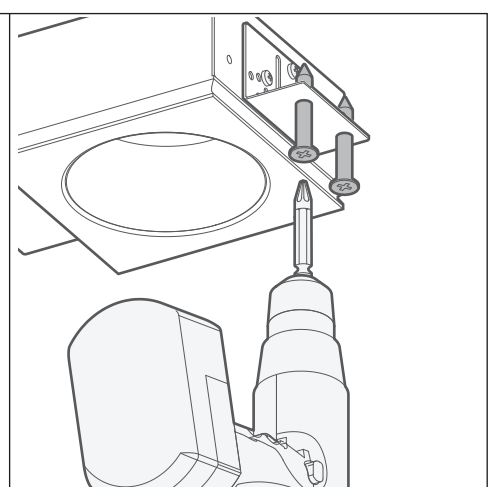


9.
With appropriate fasteners(E NOT SUPPLIED),
fix plaster mainbody (A) by screwing into
retention clips(D).

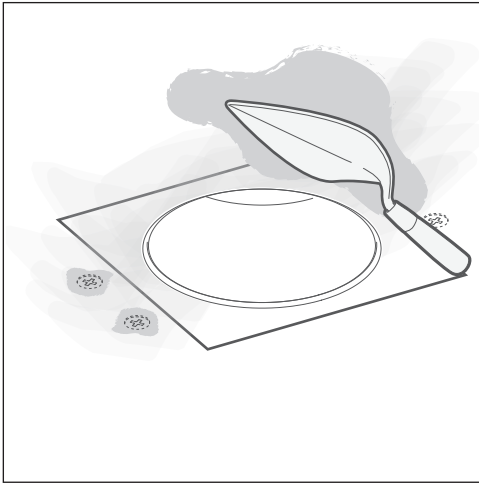


10.
Apply cornice cement along the edge of the fitting. *Ensure screw heads are covered and concealed.*

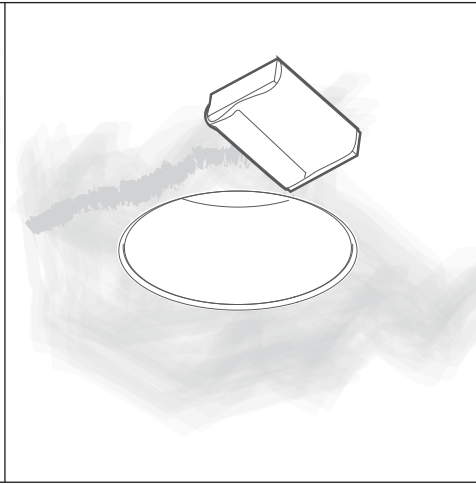


11.
With the appropriate grit sand paper; sand back the dried cornice to a smooth finish.

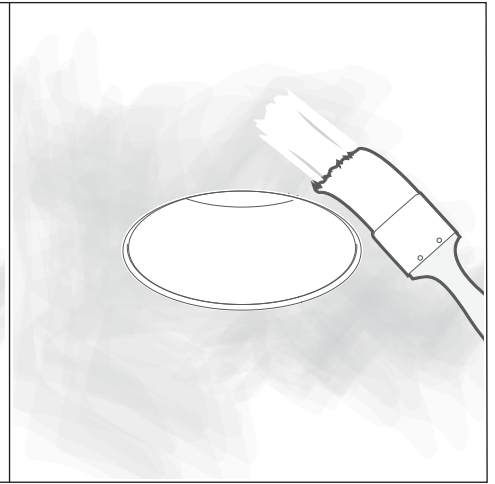


12.
Paint surface around fixture with appropriate paint.

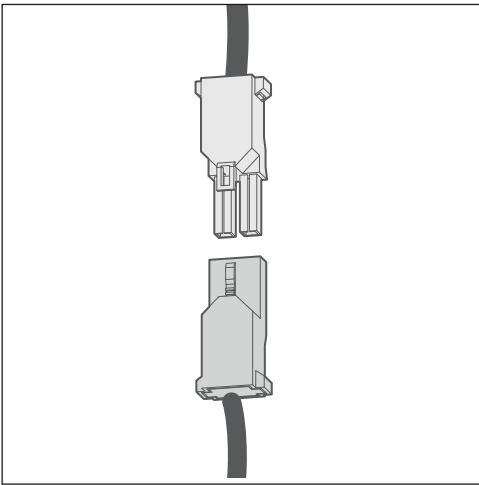

13.
Connect downlight engines(B) to driver.

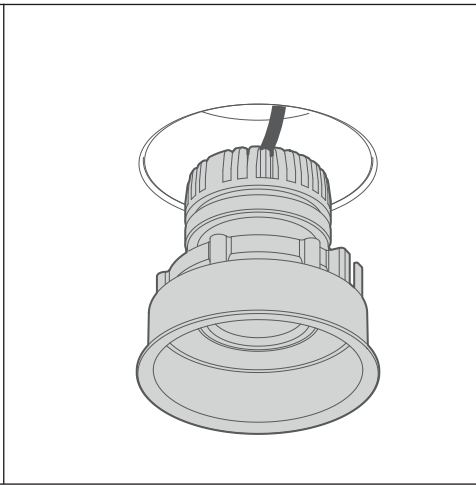

14.A IF SILENT ROUND ONE
Insert and clip downlight engine(B) back into plasterbody(A)

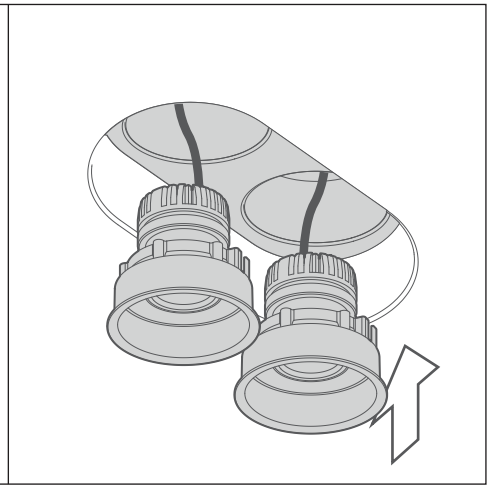

14.B IF SILENT ROUND TWO
Insert and clip downlight engines(B) back into plasterbody(A)